
PENTAIR

FAIRBANKS NIJHUIS™

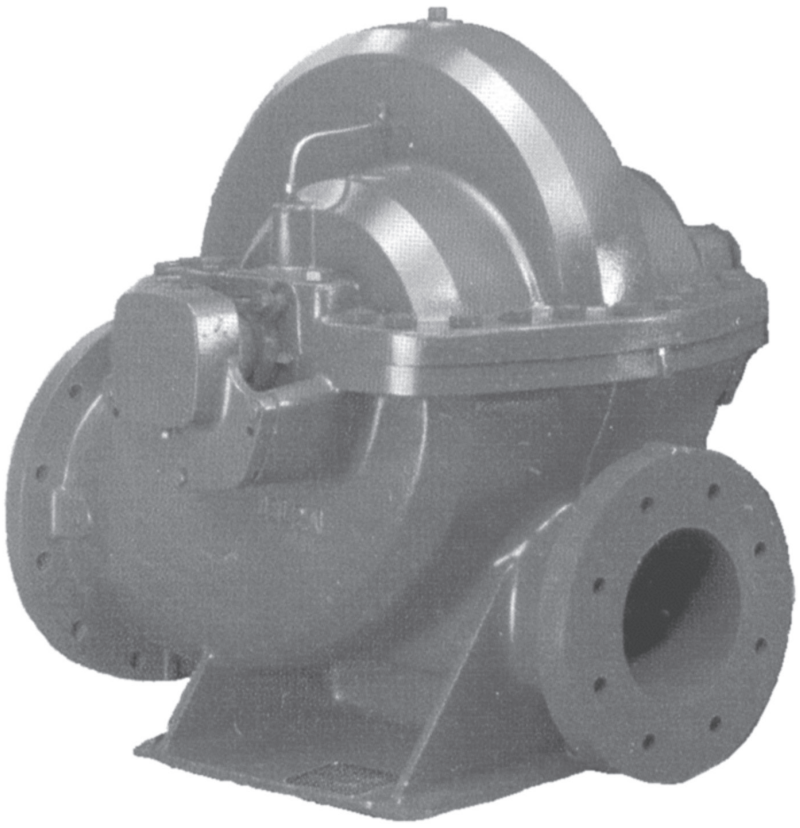

2800F, 5800F, 5900F SERIES
SPLIT CASE FIRE PUMP
REPAIR PARTS INDEX

NOTE! Read and understand the pump and motor instructions before attempting to install, disassemble or repair the pump.


Part #FMF-03-327 | © 2013 Pentair Ltd. | 02/26/13

Cross Sections
2800F with impeller style A or C [1] 4
5800F with integral bearing arm [2] 5
5800F with bolt-on bearing arm [3] 6
5900F two-stage pump [4] 7
Parts Lists for 2800F Pumps – use Cross Section [1]
3-2874AF 8
3-2874CF 8
4-2873AF 8
4-2876AF 9
4-2876CF 9
4-2823CF 9
5-2823AF 10
5-2824AF 10
6-2876AF 10
6-2823AF 11
6-2823CF 11
6-2824CF 11
6-2825AF 12
8-2823AF 12
8-2824AF 12
10-2825AF 13
Parts Lists for 5800F Pumps – use Cross Sections [2 & 3]
3-5876AF [2] 14–15
4-5823F [2] 14–15
4-5824F [2] 14–15
5-5876F [3] 16–17
6-5876F [3] 16–17
6-5823F [2] 16–17
6-5824F [2] 18–19
8-5826F [3] 18–19
10-5824F [2] 18–19
Parts Lists for 5900F Pumps – use Cross Section [4]
5-5922F [4] 20–21
6-5922F [4] 20–21
Kits & Rotating Elements 22


Italicized pump models are non-production.

Repair Parts List
Cross Section 1


2800F Split Case Pumps

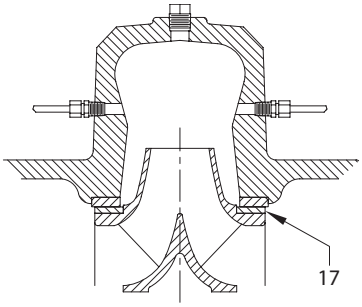


OPTIONAL IMPELLER WEAR RING

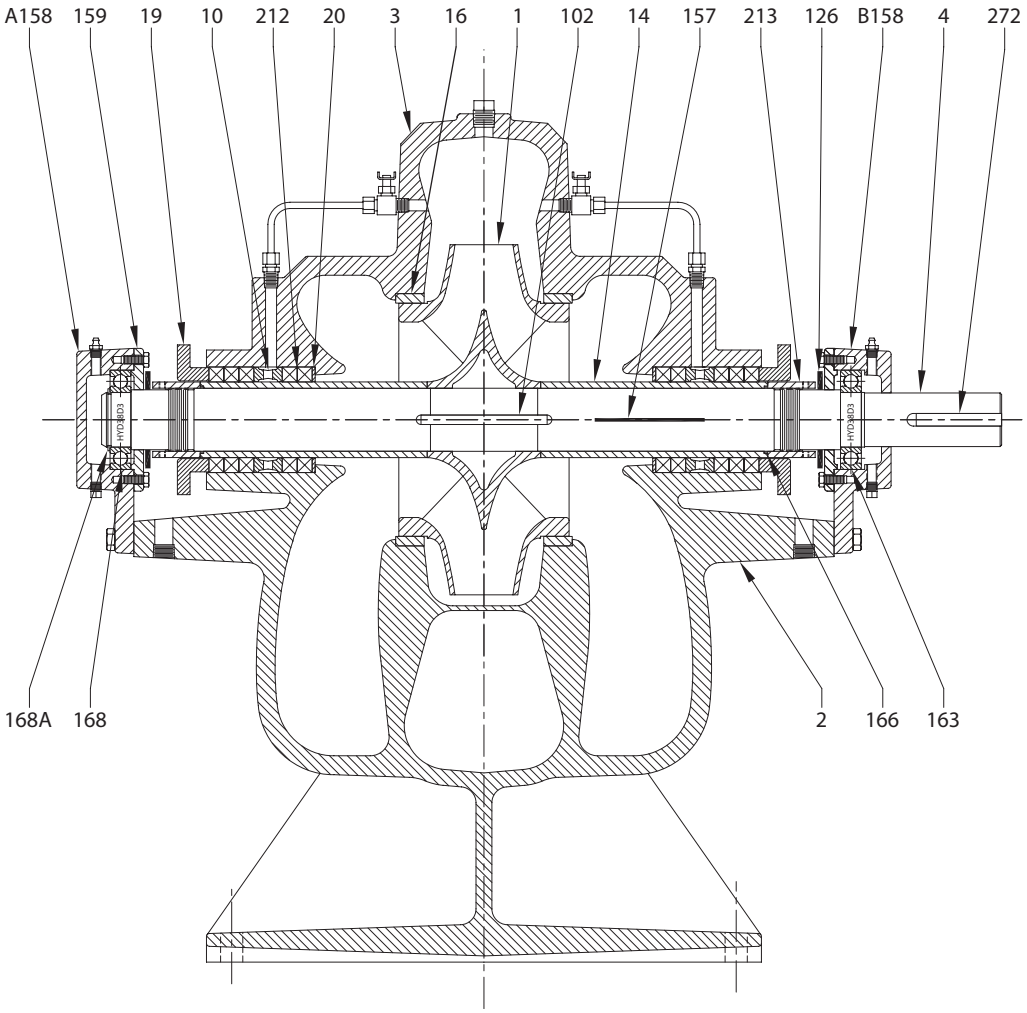


5800F Split Case Pumps with integral bearing arms

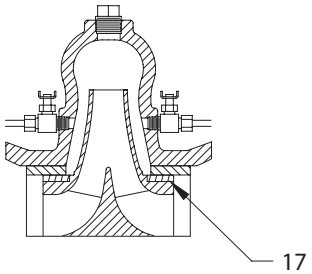


OPTIONAL IMPELLER WEAR RING

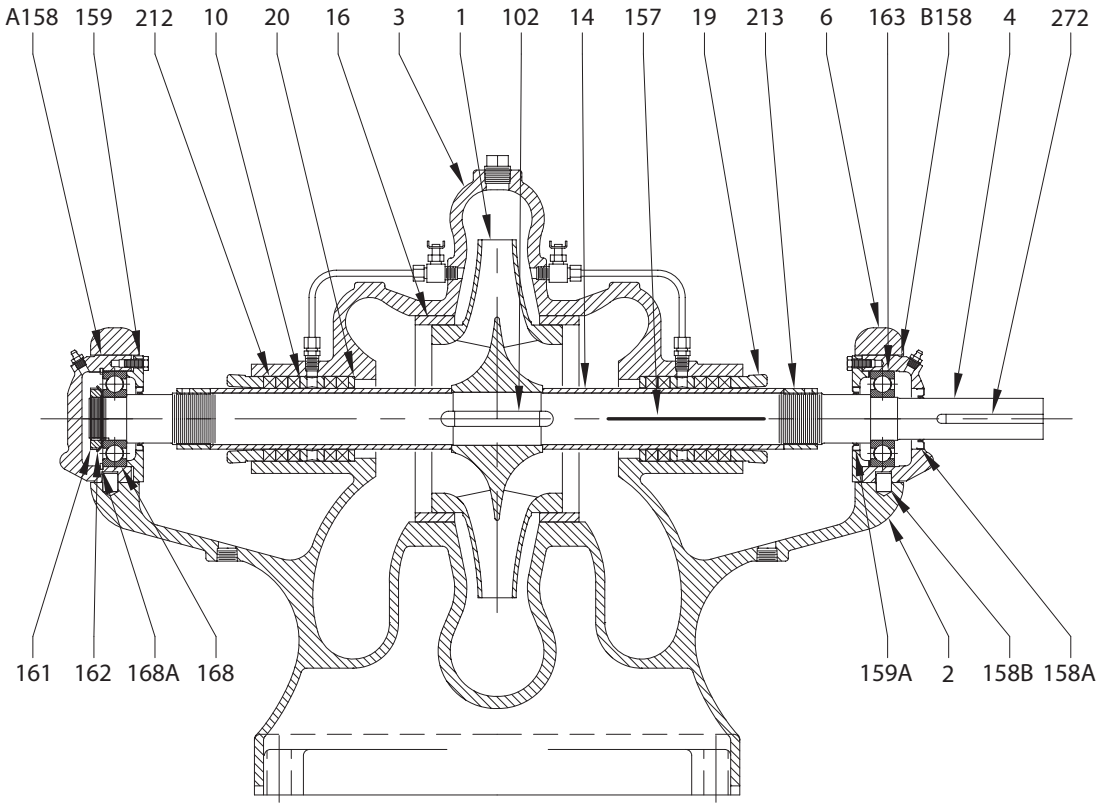


5800F Split Case Pumps with bolt-on bearing arms

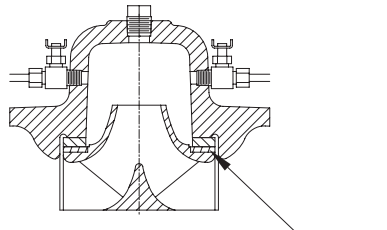

OPTIONAL IMPELLER WEAR RING

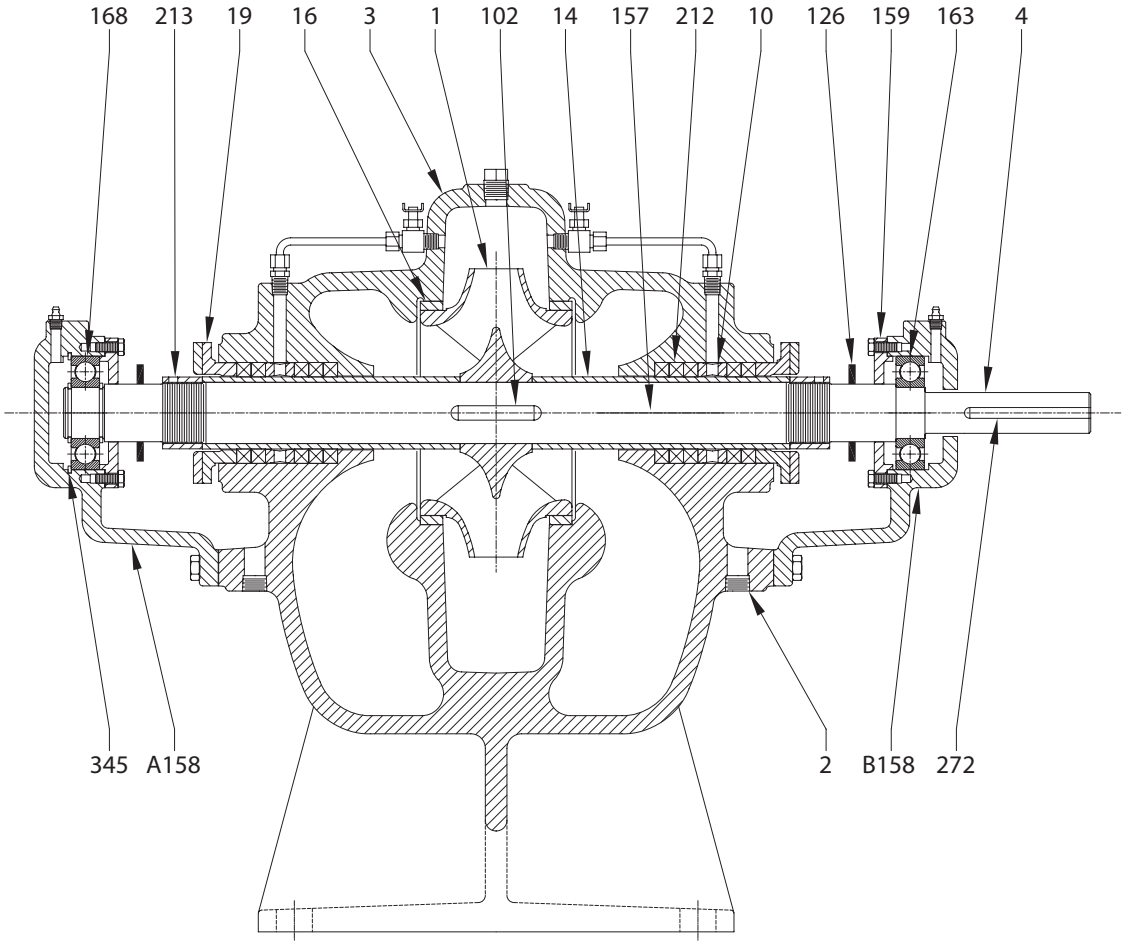

5900F Two Stage Split Case Pumps

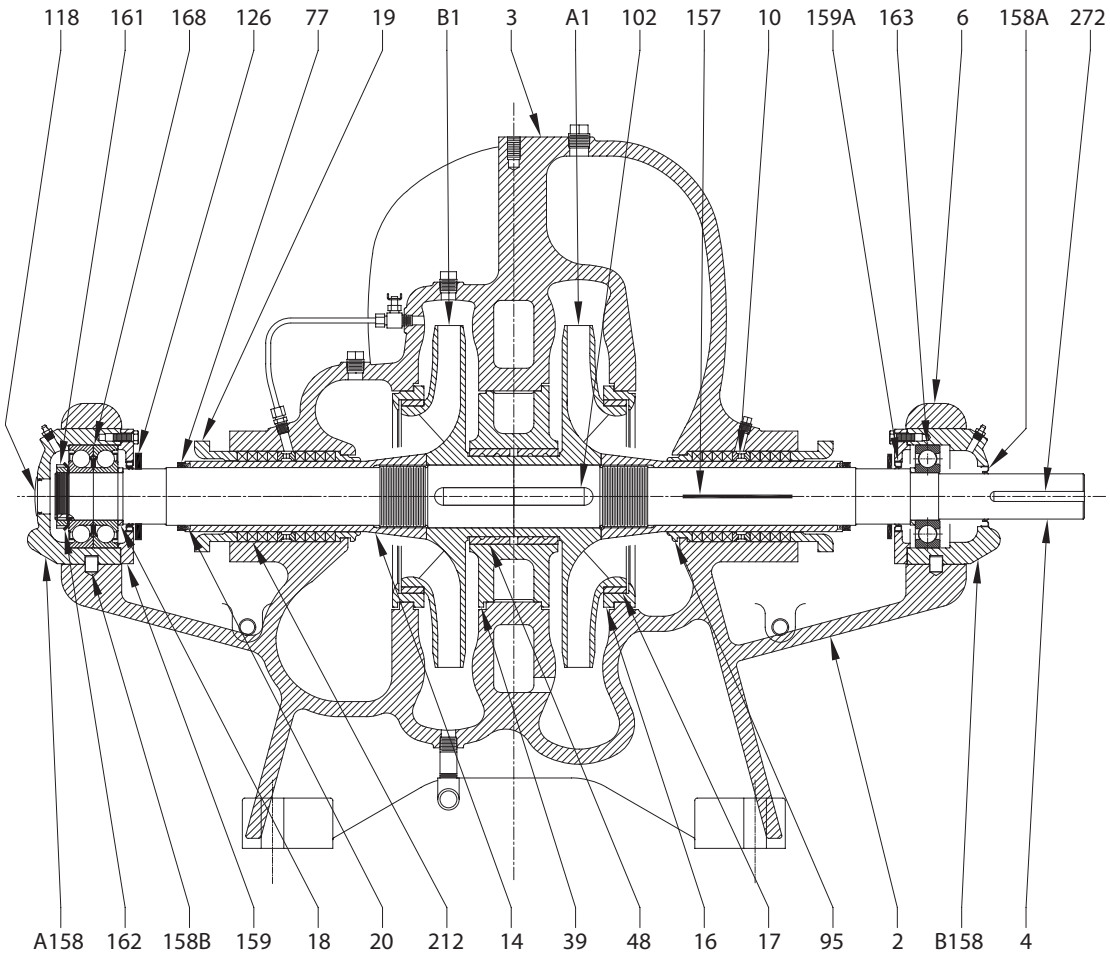

2800F Repair Parts List

PC. NO.	PART DESCRIPTION		3-2874AF QTY	3-2874AF PART NUMBER	3-2874CF QTY	3-2874CF PART NUMBER	4-2873AF QTY	4-2873AF PART NUMBER
1	IMPELLER		1	444-7002-225	1	444-7001-225	1	444-7006-225
	IMPELLER ASSEMBLY (WITH #17 RINGS)		1	443-7168-644	1	443-7108-644	1	443-7160-644
2	PART OF NO. 3		--		--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0001-010	1	189-0001-010	1	189-0009-010
		125# / 250#	1	189-0002-010	1	189-0002-010	--	
		250# / 250 #	1	189-0044-010	1	189-0044-010	--	
4	SHAFT		1	727-7000-072	1	727-7000-072	1	727-7000-072
10	LANTERN RINGS		2	676-7012-509	2	676-7012-509	2	676-7012-509
14	SHAFT SLEEVES		2	756-7000-212	2	756-7000-212	2	756-7000-212
16	CASE WEAR RINGS		2	676-7000-208	2	676-7000-208	2	676-7009-208
17	IMPELLER WEAR RINGS (OPTIONAL)		2	676-7060-208	2	676-7060-208	2	676-7151-208
19	PACKING GLANDS		2	372-7000-208	2	372-7000-208	2	372-7004-208
20	STUFFING BOX WASHERS		2	908-7000-208	2	908-7000-208	2	908-7000-208
102	IMPELLER KEY		1	472-7000-087	1	472-7000-087	1	472-7000-087
126	WATER SLINGERS		2	764-7000-999	2	764-7000-999	2	764-7000-999
157	CASING GASKET		1	364-7000-598	1	364-7000-598	1	364-7028-598
A158	THRUST BEARING CARTRIDGE		1	176-7004-010	1	176-7004-010	1	176-7004-010
B158	RADIAL BEARING CARTRIDGE		1	176-7005-010	1	176-7005-010	1	176-7005-010
159	BEARING HOUSING COVERS		2	164-7004-010	2	164-7004-010	2	164-7004-010
163	RADIAL BEARING		1	068-1907-647	1	068-1907-647	1	068-1907-647
166	SHAFT SLEEVE O-RINGS		2	364-0365-457	2	364-0365-457	2	364-0365-457
168	THRUST BEARING		1	068-1907-647	1	068-1907-647	1	068-1907-647
168A	RETAINING RING		1	676-7001-088	1	676-7001-088	1	676-7001-088
212	PACKING		10	564-7000-802	10	564-7000-802	10	564-7000-802
213	SLEEVE NUTS		2	544-7002-208	2	544-7002-208	2	544-7002-208
272	COUPLING KEY		1	472-0256-087	1	472-0256-087	1	472-0256-087
MISCELLANEOUS PARTS NOT LABELED								
	CAPSCREWS FOR:							
	CASING (PARTING FLANGE)		12	168-0566-082	12	168-0566-082	12	168-0564-082
	CASING (STUFFING BOX)		4	168-0576-082	4	168-0576-082	4	168-0576-082
	BEARING HOUSING COVERS		6	168-0308-082	6	168-0308-082	6	168-0308-082
	BEARING CARTRIDGES		6	168-0492-082	6	168-0492-082	6	168-0492-082
	PINS FOR:							
	CASING (PARTING FLANGE)		2	592-0376-087	2	592-0376-087	2	592-0376-087
	CASE WEAR RINGS		2	592-0028-104	2	592-0028-104	2	592-0028-104
	BEARING CARTRIDGES		4	592-0111-087	4	592-0111-087	4	592-0111-087
	PIPE PLUGS FOR:							
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087	2	600-0002-087	2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0004-028	1	600-0004-028	1	600-0004-028
	SIDE OF DISCHARGE NECK		1	600-0005-028	1	600-0005-028	1	600-0005-028
	BEARING CARTRIDGES		2	600-0001-087	2	600-0001-087	2	600-0001-087
	GLAND FASTENERS:							
	STUDS		4	808-7001-360	4	808-7001-360	4	808-7001-360
	WASHERS		4	908-0114-080	4	908-0114-080	4	908-0114-080
	NUTS		4	544-0113-190	4	544-0113-190	4	544-0113-190
	SETSCREWS FOR SLEEVE NUT		4	724-0079-113	4	724-0079-113	4	724-0079-113
	GREASE FITTINGS		2	508-0001-651	2	508-0001-651	2	508-0001-651
	FLUSH LINES:							
	COMPRESSION ELBOWS		4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING		24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES		2	896-4533-644	2	896-4533-644	2	896-4533-644

PC. NO.	PART DESCRIPTION		4-2876AF QTY	4-2876AF PART NUMBER	4-2876CF QTY	4-2876CF PART NUMBER	4-2823CF QTY	4-2823CF PART NUMBER
1	IMPELLER		1	444-7023-225	1	444-7005-208	1	444-7004-225
	IMPELLER ASSEMBLY (WITH #17 RINGS)		1	443-7122-644	--		1	443-7054-644
2	PART OF NO. 3		--		--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0007-010	1	189-0007-010	1	189-0005-010
		125# / 250#	1	189-0008-010	1	189-0008-010	1	189-0006-010
		250# / 250 #	1	189-0047-010	1	189-0047-010	1	189-0043-010
4	SHAFT		1	727-7005-072	1	727-7005-072	1	727-7003-072
10	LANTERN RINGS		2	676-7010-509	2	676-7010-509	2	676-7010-509
14	SHAFT SLEEVES		2	756-7004-212	2	756-7004-212	2	756-7003-212
16	CASE WEAR RINGS		2	676-7009-208	2	676-7009-208	2	676-7009-208
17	IMPELLER WEAR RINGS (OPTIONAL)		2	676-7053-208	--		2	676-7053-208
19	PACKING GLANDS		2	372-7003-208	2	372-7003-208	2	372-7003-208
20	STUFFING BOX WASHERS		2	908-7003-208	2	908-7003-208	2	908-7003-208
102	IMPELLER KEY		1	472-7000-087	1	472-7000-087	1	472-7000-087
126	WATER SLINGERS		2	764-7001-999	2	764-7001-999	2	764-7001-999
157	CASING GASKET		1	364-7023-598	1	364-7023-598	1	364-7003-598
A158	THRUST BEARING CARTRIDGE		1	176-7006-010	1	176-7006-010	1	176-7006-010
B158	RADIAL BEARING CARTRIDGE		1	176-7007-010	1	176-7007-010	1	176-7007-010
159	BEARING HOUSING COVERS		2	164-7005-010	2	164-7005-010	2	164-7005-010
163	RADIAL BEARING		1	068-1909-647	1	068-1909-647	1	068-1909-647
166	SHAFT SLEEVE O-RINGS		2	364-0374-457	2	364-0374-457	2	364-0372-457
168	THRUST BEARING		1	068-1909-647	1	068-1909-647	1	068-1909-647
168A	RETAINING RING		1	676-7011-088	1	676-7011-088	1	676-7011-088
212	PACKING		10	564-7001-802	10	564-7001-802	10	564-0174-802
213	SLEEVE NUTS		2	544-7001-208	2	544-7001-208	2	544-7001-208
272	COUPLING KEY		1	472-7003-087	1	472-7003-087	1	472-7003-087
MISCELLANEOUS PARTS NOT LABELED								
	CAPSCREWS FOR:							
	CASING (PARTING FLANGE)		14	168-0640-082	14	168-0640-082	17	168-0638-082
	CASING (STUFFING BOX)		4	168-0650-082	4	168-0650-082	4	168-0648-082
	BEARING HOUSING COVERS		6	168-0308-082	6	168-0308-082	6	168-0308-082
	BEARING CARTRIDGES		6	168-0492-082	6	168-0492-082	6	168-0492-082
	PINS FOR:							
	CASING (PARTING FLANGE)		2	592-7000-087	2	592-7000-087	2	592-7000-087
	CASE WEAR RINGS		2	592-0028-104	2	592-0028-104	2	592-0028-104
	BEARING CARTRIDGES		4	592-0111-087	4	592-0111-087	4	592-0111-087
	PIPE PLUGS FOR:							
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087	2	600-0002-087	2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0004-028	1	600-0004-028	1	600-0004-028
	SIDE OF DISCHARGE NECK		1	600-0005-028	1	600-0005-028	1	600-0005-028
	BEARING CARTRIDGES		2	600-0001-087	2	600-0001-087	2	600-0001-087
	GLAND FASTENERS:							
	STUDS		4	808-7002-360	4	808-7002-360	4	808-7002-360
	WASHERS		4	908-0114-080	4	908-0114-080	4	908-0114-080
	NUTS		4	544-0113-190	4	544-0113-190	4	544-0113-190
	SETSCREWS FOR SLEEVE NUT		4	724-0079-113	4	724-0079-113	4	724-0079-113
	GREASE FITTINGS		2	508-0001-651	2	508-0001-651	2	508-0001-651
	FLUSH LINES:							
	COMPRESSION ELBOWS		4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING		24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES		2	896-4533-644	2	896-4533-644	2	896-4533-644

2800F Repair Parts List

PC. NO.	PART DESCRIPTION		5-2823AF QTY	5-2823AF PART NUMBER	5-2824AF QTY	5-2824AF PART NUMBER	6-2876AF QTY	6-2876AF PART NUMBER
1	IMPELLER		1	444-7007-225	1	444-7008-225	1	444-7009-208
	IMPELLER ASSEMBLY (WITH #17 RINGS)		1	443-7055-644	1	443-7041-644	--	
2	PART OF NO. 3		--		--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0010-010	1	189-0012-010	1	189-0042-010
		125# / 250#	1	189-0011-010	1	189-0013-010	1	189-0014-010
		250# / 250 #	1	189-0046-010	1	189-0048-010	1	189-0151-010
4	SHAFT		1	727-7003-072	1	727-7006-072	1	727-7005-072
10	LANTERN RINGS		2	676-7010-509	2	676-7015-509	2	676-7010-509
14	SHAFT SLEEVES		2	756-7003-212	2	756-7005-212	2	756-7004-212
16	CASE WEAR RINGS		2	676-7014-208	2	676-7014-208	2	676-7009-208
17	IMPELLER WEAR RINGS (OPTIONAL)		2	676-7041-208	2	676-7070-208	--	
19	PACKING GLANDS		2	372-7003-208	2	372-7005-208	2	372-7003-208
20	STUFFING BOX WASHERS		2	908-7003-208	2	908-7004-208	2	908-7003-208
102	IMPELLER KEY		1	472-7000-087	1	472-7004-087	1	472-7000-087
126	WATER SLINGERS		2	764-7001-999	2	764-7002-999	2	764-7001-999
157	CASING GASKET		1	364-7029-598	1	364-7005-598	1	364-7007-598
A158	THRUST BEARING CARTRIDGE		1	176-7006-010	1	176-7010-010	1	176-7006-010
B158	RADIAL BEARING CARTRIDGE		1	176-7007-010	1	176-7011-010	1	176-7007-010
159	BEARING HOUSING COVERS		2	164-7005-010	2	164-7007-010	2	164-7005-010
163	RADIAL BEARING		1	068-1909-647	1	068-1912-647	1	068-1909-647
166	SHAFT SLEEVE O-RINGS		2	364-0372-457	2	364-0381-457	2	364-0374-457
168	THRUST BEARING		1	068-1909-647	1	068-1912-647	1	068-1909-647
168A	RETAINING RING		1	676-7011-088	1	676-0289-088	1	676-7011-088
212	PACKING		10	564-0175-802	10	564-7002-802	12	564-7001-802
213	SLEEVE NUTS		2	544-7001-208	2	544-7004-208	2	544-7001-208
272	COUPLING KEY		1	472-7003-087	1	472-0362-087	1	472-7003-087
MISCELLANEOUS PARTS NOT LABELED								
	CAPSCREWS FOR:							
	CASING (PARTING FLANGE)		19	168-0638-082	17	168-0680-082	14	168-0640-082
	CASING (STUFFING BOX)		4	168-0650-082	4	168-0688-082	4	168-0650-082
	BEARING HOUSING COVERS		6	168-0308-082	6	168-0308-082	6	168-0308-082
	BEARING CARTRIDGES		6	168-0492-082	6	168-0492-082	6	168-0492-082
	PINS FOR:							
	CASING (PARTING FLANGE)		2	592-7000-087	2	592-7000-087	2	592-7000-087
	CASE WEAR RINGS		2	592-0028-104	2	592-0028-104	2	592-7009-087
	BEARING CARTRIDGES		4	592-0111-087	4	592-0111-087	4	592-0111-087
	PIPE PLUGS FOR:							
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087	2	600-0002-087	2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0004-028	1	600-0004-028	1	600-0004-028
	SIDE OF DISCHARGE NECK		1	600-0006-028	1	600-0006-028	1	600-0006-028
	BEARING CARTRIDGES		2	600-0001-087	2	600-0001-087	2	600-0001-087
	GLAND FASTENERS:							
	STUDS		4	808-7002-360	4	808-7002-360	4	808-7002-360
	WASHERS		4	908-0114-080	4	908-0114-080	4	908-0114-080
	NUTS		4	544-0113-190	4	544-0113-190	4	544-0113-190
	SETSCREWS FOR SLEEVE NUT		4	724-0079-113	4	724-0079-113	4	724-0079-113
	GREASE FITTINGS		2	508-0001-651	2	508-0001-651	2	508-0001-651
	FLUSH LINES:							
	COMPRESSION ELBOWS		4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING		24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES		2	896-4533-644	2	896-4533-644	2	896-4533-644

PC. NO.	PART DESCRIPTION		6-2823AF QTY	6-2823AF PART NUMBER	6-2823CF QTY	6-2823CF PART NUMBER	6-2824CF QTY	6-2824CF PART NUMBER
1	IMPELLER		1	444-7015-225	1	444-7016-225	1	444-7014-225
	IMPELLER ASSEMBLY (WITH #17 RINGS)		1	443-7083-644	1	443-7133-644	1	443-7114-644
2	PART OF NO. 3		--		--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0021-010	1	189-0021-010	1	189-0019-010
		125# / 250#	1	189-0022-010	1	189-0022-010	1	189-0020-010
		250# / 250 #	1	189-0052-010	1	189-0052-010	1	189-0050-010
4	SHAFT		1	727-7008-072	1	727-7008-072	1	727-7008-072
10	LANTERN RINGS		2	676-7015-509	2	676-7015-509	2	676-7015-509
14	SHAFT SLEEVES		2	756-7007-212	2	756-7007-212	2	756-7007-212
16	CASE WEAR RINGS		2	676-7019-208	2	676-7019-208	2	676-7018-208
17	IMPELLER WEAR RINGS (OPTIONAL)		2	676-7063-208	2	676-7063-208	2	676-7095-208
19	PACKING GLANDS		2	372-7005-208	2	372-7005-208	2	372-7005-208
20	STUFFING BOX WASHERS		2	908-7004-208	2	908-7004-208	2	908-7004-208
102	IMPELLER KEY		1	472-7004-087	1	472-7004-087	1	472-7004-087
126	WATER SLINGERS		2	764-7002-999	2	764-7002-999	2	764-7002-999
157	CASING GASKET		1	364-7009-598	1	364-7009-598	1	364-7008-598
A158	THRUST BEARING CARTRIDGE		1	176-7010-010	1	176-7010-010	1	176-7010-010
B158	RADIAL BEARING CARTRIDGE		1	176-7011-010	1	176-7011-010	1	176-7011-010
159	BEARING HOUSING COVERS		2	164-7007-010	2	164-7007-010	2	164-7007-010
163	RADIAL BEARING		1	068-1912-647	1	068-1912-647	1	068-1912-647
166	SHAFT SLEEVE O-RINGS		2	364-0381-457	2	364-0381-457	2	364-0381-457
168	THRUST BEARING		1	068-1912-647	1	068-1912-647	1	068-1912-647
168A	RETAINING RING		1	676-0289-088	1	676-0289-088	1	676-0289-088
212	PACKING		10	564-7002-802	10	564-7002-802	10	564-7002-802
213	SLEEVE NUTS		2	544-7004-208	2	544-7004-208	2	544-7004-208
272	COUPLING KEY		1	472-0362-087	1	472-0362-087	1	472-0362-087
MISCELLANEOUS PARTS NOT LABELED								
	CAPSCREWS FOR:							
	CASING (PARTING FLANGE)		22	168-0640-082	22	168-0640-082	19	168-0680-082
	CASING (STUFFING BOX)		4	168-0652-082	4	168-0652-082	4	168-0688-082
	BEARING HOUSING COVERS		6	168-0308-082	6	168-0308-082	6	168-0308-082
	BEARING CARTRIDGES		6	168-0492-082	6	168-0492-082	6	168-0492-082
	PINS FOR:							
	CASING (PARTING FLANGE)		2	592-7000-087	2	592-7000-087	2	592-7000-087
	CASE WEAR RINGS		2	592-7009-087	2	592-7009-087	2	592-7009-087
	BEARING CARTRIDGES		4	592-0111-087	4	592-0111-087	4	592-0111-087
	PIPE PLUGS FOR:							
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087	2	600-0002-087	2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0004-028	1	600-0004-028	1	600-0004-028
	SIDE OF DISCHARGE NECK		1	600-0006-028	1	600-0006-028	1	600-0006-028
	BEARING CARTRIDGES		2	600-0001-087	2	600-0001-087	2	600-0001-087
	GLAND FASTENERS:							
	STUDS		4	808-7002-360	4	808-7002-360	4	808-7002-360
	WASHERS		4	908-0114-080	4	908-0114-080	4	908-0114-080
	NUTS		4	544-0113-190	4	544-0113-190	4	544-0113-190
	SETSCREWS FOR SLEEVE NUT		4	724-0079-113	4	724-0079-113	4	724-0079-113
	GREASE FITTINGS		2	508-0001-651	2	508-0001-651	2	508-0001-651
	FLUSH LINES:							
	COMPRESSION ELBOWS		4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING		24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES		2	896-4533-644	2	896-4533-644	2	896-4533-644

2800F Repair Parts List

PC. NO.	PART DESCRIPTION		6-2825AF QTY	6-2825AF PART NUMBER	8-2823AF QTY	8-2823AF PART NUMBER	8-2824AF QTY	8-2824AF PART NUMBER
1	IMPELLER		1	444-7022-208	1	444-7019-225	1	444-7020-225
	IMPELLER ASSEMBLY (WITH #17 RINGS)		--		1	443-7088-644	1	443-7117-644
2	PART OF NO. 3		--		--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0029-010	1	189-0024-010	1	189-0026-010
		125# / 250#	1	189-0030-010	1	189-0025-010	1	189-0027-010
		250# / 250 #	1	189-0051-010	1	189-0045-010	1	189-0049-010
4	SHAFT		1	727-7009-072	1	727-7014-072	1	727-7015-072
10	LANTERN RINGS		2	676-7021-509	2	676-7015-509	2	676-7021-509
14	SHAFT SLEEVES		2	756-7008-212	2	756-7013-212	2	756-7014-212
16	CASE WEAR RINGS		2	676-7020-208	2	676-7027-208	2	676-7042-208
17	IMPELLER WEAR RINGS (OPTIONAL)		--		2	676-7086-208	2	676-7107-208
19	PACKING GLANDS		2	372-7007-208	2	372-7005-208	2	372-7007-208
20	STUFFING BOX WASHERS		2	908-7005-208	2	908-7004-208	2	908-7005-208
102	IMPELLER KEY		1	472-7007-087	1	472-7004-087	1	472-7007-087
126	WATER SLINGERS		2	764-7004-999	2	764-7002-999	2	764-7004-999
157	CASING GASKET		1	364-7010-598	1	364-7017-598	1	364-7018-598
A158	THRUST BEARING CARTRIDGE		1	176-7014-010	1	176-7010-010	1	176-7014-010
B158	RADIAL BEARING CARTRIDGE		1	176-7015-010	1	176-7011-010	1	176-7015-010
159	BEARING HOUSING COVERS		2	164-7009-010	2	164-7007-010	2	164-7009-010
163	RADIAL BEARING		1	068-1914-647	1	068-1912-647	1	068-1914-647
166	SHAFT SLEEVE O-RINGS		2	364-0388-457	2	364-0381-457	2	364-0388-457
168	THRUST BEARING		1	068-1914-647	1	068-1912-647	1	068-1914-647
168A	RETAINING RING		1	676-0295-088	1	676-0289-088	1	676-0295-088
212	PACKING		10	564-7003-802	10	564-7002-802	10	564-7003-802
213	SLEEVE NUTS		2	544-7006-208	2	544-7004-208	2	544-7006-208
272	COUPLING KEY		1	472-0390-087	1	472-0362-087	1	472-0390-087
MISCELLANEOUS PARTS NOT LABELED								
	CAPSCREWS FOR:							
	CASING (PARTING FLANGE)		23	168-0680-082	22	168-0680-082	26	168-0680-082
	CASING (STUFFING BOX)		4	168-0690-082	4	168-0688-082	4	168-0690-082
	BEARING HOUSING COVERS		6	168-0308-082	6	168-0308-082	6	168-0308-082
	BEARING CARTRIDGES		6	168-0492-082	6	168-0492-082	6	168-0492-082
	PINS FOR:							
	CASING (PARTING FLANGE)		2	592-7000-087	2	592-7000-087	2	592-7000-087
	CASE WEAR RINGS		2	592-7009-087	2	592-7009-087	2	592-7009-087
	BEARING CARTRIDGES		4	592-0111-087	4	592-0111-087	4	592-0111-087
	PIPE PLUGS FOR:							
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087	2	600-0002-087	2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0004-028	1	600-0004-028	1	600-0004-028
	SIDE OF DISCHARGE NECK		1	600-0006-028	1	600-0006-028	1	600-0006-028
	BEARING CARTRIDGES		2	600-0001-087	2	600-0001-087	2	600-0001-087
	GLAND FASTENERS:							
	STUDS		4	808-7002-360	4	808-7002-360	4	808-7002-360
	WASHERS		4	908-0114-080	4	908-0114-080	4	908-0114-080
	NUTS		4	544-0113-190	4	544-0113-190	4	544-0113-190
	SETSCREWS FOR SLEEVE NUT		4	724-0079-113	4	724-0077-104	4	724-0079-113
	GREASE FITTINGS		2	508-0001-651	2	508-0001-651	2	508-0001-651
	FLUSH LINES:							
	COMPRESSION ELBOWS		4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING		24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES		2	896-4533-644	2	896-4533-644	2	896-4533-644

PC. NO.	PART DESCRIPTION		10-2825AF QTY	10-2825AF PART NUMBER
1	IMPELLER		1	444-7032-208
	IMPELLER ASSEMBLY (WITH #17 RINGS)		--	
2	PART OF NO. 3		--	
3	CASING ASSEMBLY	125# / 125#	--	
		125# / 250#	1	189-0037-010
		250# / 250 #	--	
4	SHAFT		1	727-7016-072
10	LANTERN RINGS		2	676-7021-509
14	SHAFT SLEEVES		2	756-7015-212
16	CASE WEAR RINGS		2	676-7029-208
17	IMPELLER WEAR RINGS (OPTIONAL)		--	
19	PACKING GLANDS		2	372-7007-208
20	STUFFING BOX WASHERS		2	908-7005-208
102	IMPELLER KEY		1	472-7032-104
126	WATER SLINGERS		2	764-7004-999
157	CASING GASKET		1	364-7020-598
A158	THRUST BEARING CARTRIDGE		1	176-7014-010
B158	RADIAL BEARING CARTRIDGE		1	176-7020-010
159	BEARING HOUSING COVERS		2	164-7009-010
163	RADIAL BEARING		1	068-1915-647
166	SHAFT SLEEVE O-RINGS		2	364-0388-457
168	THRUST BEARING		1	068-1914-647
168A	RETAINING RING		1	676-0295-088
212	PACKING		10	564-7003-802
213	SLEEVE NUTS		2	544-7006-208
272	COUPLING KEY		1	472-0394-087
MISCELLANEOUS PARTS NOT LABELED				
	CAPSCREWS FOR:			
	CASING (PARTING FLANGE)		26	168-0640-082
	CASING (STUFFING BOX)		4	168-0564-082
	BEARING HOUSING COVERS		6	168-0308-082
	BEARING CARTRIDGES		6	168-0492-082
	PINS FOR:			
	CASING (PARTING FLANGE)		2	592-0376-087
	CASE WEAR RINGS		2	592-7009-087
	BEARING CARTRIDGES		4	592-0111-087
	PIPE PLUGS FOR:			
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0004-028
	SIDE OF DISCHARGE NECK		1	600-0006-028
	BEARING CARTRIDGES		2	600-0001-087
	GLAND FASTENERS:			
	STUDS		4	808-7002-360
	WASHERS		4	908-0114-080
	NUTS		4	544-0113-190
	SETSCREWS FOR SLEEVE NUT		4	724-0079-113
	GREASE FITTINGS		2	508-0001-651
	FLUSH LINES:			
	COMPRESSION ELBOWS		4	868-3660-190
	TUBING		24	872-0124-175
	BALL VALVES		2	896-4533-644

5800F Repair Parts List

PC. NO.	PART DESCRIPTION		3-5876AF QTY	3-5876AF PART NUMBER	4-5823F QTY	4-5823F PART NUMBER	4-5824F QTY	4-5824F PART NUMBER
1	IMPELLER		--		1	444-7003-225	1	444-7026-225
	IMPELLER ASSEMBLY (WITH #17 RINGS)		1	443-7025-644	1	443-7105-644	1	443-7106-644
2	PART OF NO. 3				--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0031-010	1	189-0003-010	1	189-0004-010
		125# / 250#	1	189-0032-010	--		--	
		250# / 250 #	--		--		--	
4	SHAFT		1	727-7002-072	1	727-7001-072	1	727-7001-072
6	PART OF NO. 3				--		--	
10	LANTERN RINGS		2	676-7003-509	2	676-7005-509	2	676-7005-509
14	SHAFT SLEEVES		2	756-7027-212	2	756-7001-212	2	756-7001-212
16	CASE WEAR RINGS		2	676-7004-208	2	676-7002-208	2	676-7002-208
17	IMPELLER WEAR RINGS (OPTIONAL)		2	676-7008-208	2	676-7043-208	2	676-7043-208
19	PACKING GLANDS		2	372-7002-208	2	372-7001-208	2	372-7001-208
20	STUFFING BOX WASHERS		2	908-7002-208	2	908-7001-208	2	908-7001-208
102	IMPELLER KEY		1	472-7002-087	1	472-7001-087	1	472-7001-087
126	WATER SLINGERS		--		--		--	
157	CASING GASKET		1	364-7002-598	1	364-7001-598	1	364-7004-598
158A	GREASE SEAL		1	712-7000-653	1	712-7002-653	1	712-7002-653
158B	DOWEL PIN		--		2	592-0857-087	2	592-0858-087
A158	THRUST BEARING CARTRIDGE		1	176-7000-010	1	176-7008-010	1	176-7008-010
B158	RADIAL BEARING CARTRIDGE		1	176-7001-010	1	176-7009-010	1	176-7009-010
159	BEARING HOUSING COVERS		2	164-7001-010	2	164-7006-010	2	164-7006-010
159A	GREASE SEAL		2	712-7001-653	2	712-7003-653	2	712-7003-653
161	BEARING LOCKNUT		1	544-0707-080	1	544-0708-080	1	544-0708-080
162	BEARING LOCKWASHER		1	908-0407-080	1	908-0408-080	1	908-0408-080
163	RADIAL BEARING		1	068-0157-647	1	068-0158-647	1	068-0158-647
166	SHAFT SLEEVE O-RINGS		2	364-0423-457	--		2	364-0426-457
168	THRUST BEARING		1	068-0157-647	1	068-0158-647	1	068-0158-647
168A	RETAINING RING		1	676-7007-088	1	676-7013-088	1	676-7013-088
212	PACKING		10	564-0105-802	10	564-0110-802	10	564-0110-802
213	SLEEVE NUTS		2	544-7000-208	2	544-7003-208	2	544-7003-208
272	COUPLING KEY		1	472-0259-087	1	472-0256-087	1	472-0256-087
345	BEARING SNAP RING		--		--		--	
MISCELLANEOUS PARTS NOT LABELED								
	CAPSCREWS FOR:							
	CASING (PARTING FLANGE)		23	168-0680-082	22	168-0680-082	26	168-0680-082
	CASING (STUFFING BOX)		4	168-0690-082	4	168-0688-082	4	168-0690-082
	BEARING HOUSING COVERS		6	168-0308-082	6	168-0308-082	6	168-0308-082
	BEARING CARTRIDGES		6	168-0492-082	6	168-0492-082	6	168-0492-082
	PINS FOR:							
	CASING (PARTING FLANGE)		2	592-7000-087	2	592-7000-087	2	592-7000-087
	CASE WEAR RINGS		2	592-7009-087	2	592-7009-087	2	592-7009-087
	BEARING CARTRIDGES		4	592-0111-087	4	592-0111-087	4	592-0111-087
	PIPE PLUGS FOR:							
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087	2	600-0002-087	2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0004-028	1	600-0004-028	1	600-0004-028
	SIDE OF DISCHARGE NECK		1	600-0006-028	1	600-0006-028	1	600-0006-028
	BEARING CARTRIDGES		2	600-0001-087	2	600-0001-087	2	600-0001-087
	GLAND FASTENERS:							
	STUDS		4	808-7002-360	4	808-7002-360	4	808-7002-360
	WASHERS		4	908-0114-080	4	908-0114-080	4	908-0114-080
	NUTS		4	544-0113-190	4	544-0113-190	4	544-0113-190
	SETSCREWS FOR SLEEVE NUT		4	724-0079-113	4	724-0077-104	4	724-0079-113
	GREASE FITTINGS		2	508-0001-651	2	508-0001-651	2	508-0001-651
	FLUSH LINES:							
	COMPRESSION ELBOWS		4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING		24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES		2	896-4533-644	2	896-4533-644	2	896-4533-644

PC. NO.	PART DESCRIPTION	3-5876AF		4-5823F		4-5824F	
		QTY	PART NUMBER	QTY	PART NUMBER	QTY	PART NUMBER
	GLAND FASTENERS:						
	SWINGBOLTS OR STUDS	4	100-7001-360	4	100-7001-360	4	100-7001-360
	WASHERS	4	908-0114-080	4	908-0114-080	4	908-0114-080
	NUTS	4	544-0113-190	4	544-0113-190	4	544-0113-190
	SETSCREWS FOR SLEEVE NUT	--		--		--	
	GREASE FITTINGS	2	508-0001-651	2	508-0001-651	2	508-0001-651
	BEARING COVER O-RINGS	2		2	364-0426-457	--	
	BEARING SPACER	1		1	772-7000-063	1	772-7000-063
	LIFTING EYEBOLT	--		--		--	
	FLUSH LINES:						
	COMPRESSION ELBOWS	4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING	24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES	2	896-4533-644	2	896-4533-644	2	896-4533-644

5800F Repair Parts List

PC. NO.	PART DESCRIPTION		5-5876F QTY	5-5876F PART NUMBER	6-5876F QTY	6-5876F PART NUMBER	6-5823F QTY	6-5823F PART NUMBER
1	IMPELLER		1	444-7027-225	1	444-7011-225	1	444-7010-225
	IMPELLER ASSEMBLY (WITH #17 RINGS)		--		--			
2	PART OF NO. 3		--		--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0033-010	1	189-0016-010	1	189-0015-010
		125# / 250#	1	189-0034-010	1	189-0017-010	--	
		250# / 250 #	--		1	189-0064-010	--	
4	SHAFT		1	727-7007-072	1	727-7011-072	1	727-7010-072
6	PART OF NO. 3		--		--		--	
10	LANTERN RINGS		2	676-7010-509	2	676-7010-509	2	676-7010-509
14	SHAFT SLEEVES		2	756-7006-212	2	756-7006-212	2	756-7009-212
16	CASE WEAR RINGS		2	676-7016-208	2	676-7024-208	2	676-7022-208
17	IMPELLER WEAR RINGS (OPTIONAL)		--		--		2	676-7013-208
19	PACKING GLANDS		2	372-7006-208	2	372-7006-208	2	372-7006-208
20	STUFFING BOX WASHERS		--		--		2	908-7006-208
102	IMPELLER KEY		1	472-7006-087	1	472-7006-087	1	472-7008-087
126	WATER SLINGERS		2	764-7003-478	2	764-7003-478	--	
157	CASING GASKET		1	364-7006-598	1	364-7012-598	1	364-7030-598
158A	GREASE SEAL		--		--		1	712-7004-653
A158	THRUST BEARING CARTRIDGE		1	176-7012-010	1	176-7012-010	1	176-7016-010
B158	RADIAL BEARING CARTRIDGE		1	176-7013-010	1	176-7013-010	1	176-7017-010
159	BEARING HOUSING COVERS		2	164-7008-010	2	164-7008-010	2	164-7011-010
159A	GREASE SEAL		--		--		2	712-7005-653
161	BEARING LOCKNUT		--		--		1	544-0710-080
162	BEARING LOCKWASHER		--		--		1	908-0410-080
163	RADIAL BEARING		1	068-0160-647	1	068-0160-647	1	068-0160-647
168	THRUST BEARING		1	068-0160-647	1	068-0160-647	1	068-0160-647
168A	RETAINING RING		2	676-7017-088	2	676-7017-088	--	
212	PACKING		12	564-7001-802	12	564-7001-802	10	564-7001-802
213	SLEEVE NUTS		2	544-7005-208	2	544-7005-208	2	544-7005-208
272	COUPLING KEY		1	472-7005-087	1	472-7005-087	1	472-7005-087
345	BEARING SNAP RING		1	676-7023-088	1	676-7023-088	1	676-7023-088
MISCELLANEOUS PARTS NOT LABELED								
	CAPSCREWS FOR:							
	CASING (PARTING FLANGE)		17	168-0363-082	21	168-0366-082	15	168-0636-082
	CASING (STUFFING BOX)		4	168-0562-082	4	168-0562-082	4	168-0640-082
	BEARING CAP (NO. 6)		--		--		4	168-0578-082
	BEARING HOUSING COVERS		8	168-0308-082	8	168-0308-082	8	168-0304-082
	BEARING CARTRIDGE TO BEARING ARMS		8	168-0490-082	8	168-0490-082	--	
	PINS FOR:							
	CASING (PARTING FLANGE)		2	592-0376-087	2	592-0376-087	2	592-0028-104
	CASE WEAR RINGS		2	592-0376-104	2	592-0028-104	2	592-7009-087
	BEARING CARTRIDGES		4	592-0111-087	4	592-0111-087	2	592-7005-087
	PIPE PLUGS FOR:							
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087	2	600-0002-087	2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0004-028	1	600-0004-028	1	600-0006-028
	BOTTOM OF NECKS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	SIDE OF DISCHARGE NECK		1	600-0006-028	1	600-0006-028	2	600-0006-028
	BEARING CARTRIDGES		2	600-0001-087	2	600-0001-087	--	

PC. NO.	PART DESCRIPTION	5-5876F		6-5876F		6-5823F	
		QTY	PART NUMBER	QTY	PART NUMBER	QTY	PART NUMBER
	GLAND FASTENERS:						
	SWINGBOLTS OR STUDS	4	808-7002-360	4	808-7002-360	4	100-7001-360
	WASHERS	4	908-0114-080	4	908-0114-080	4	908-0114-080
	NUTS	4	544-0113-190	4	544-0113-190	4	544-0113-190
	SETSCREWS FOR SLEEVE NUT	4	724-0079-113				
	GREASE FITTINGS	2	508-0001-651	2	508-0001-651	2	508-0001-651
	BEARING COVER O-RINGS	--		--		2	364-0432-457
	BEARING SPACER	2	100-0104-080	2	100-0104-080	--	
	LIFTING EYEBOLT	--		--		--	
	FLUSH LINES:						
	COMPRESSION ELBOWS	4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING	24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES	2	896-4533-644	2	896-4533-644	2	896-4533-644

5800F Repair Parts List

PC. NO.	PART DESCRIPTION		*6-5824F* QTY	*6-5824F* PART NUMBER	*8-5826F* QTY	*8-5826F* PART NUMBER	10-5824F QTY	10-5824F PART NUMBER
1	IMPELLER		1	444-7033-225	--		1	444-7021-208
	IMPELLER ASSEMBLY (WITH #17 RINGS)		1	443-7080-644	1	443-7113-644	1	443-7097-644
2	PART OF NO. 3		--		--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0038-010	1	189-0134-010	1	189-0028-010
		125# / 250#	--		--		1	189-0120-010
		250# / 250 #	--		1	189-0118-010	1	189-0121-010
4	SHAFT		1	727-7010-072	1	727-7025-072	1	727-7017-072
6	PART OF NO. 3		--		--		--	
10	LANTERN RINGS		2	676-7010-509	2	676-7078-509	2	676-7030-509
14	SHAFT SLEEVES		2	756-7009-212	2	756-7047-212	2	756-7016-212
16	CASE WEAR RINGS		2	676-7022-208	2	676-7125-208	2	676-7031-208
17	IMPELLER WEAR RINGS (OPTIONAL)		2	676-7034-208	2	676-7124-208	2	676-7075-208
19	PACKING GLANDS		2	372-7006-208	2	372-7035-208	2	372-7009-208
20	STUFFING BOX WASHERS OR BUSHINGS		2	908-7006-208	2	136-7012-208	2	136-7002-208
102	IMPELLER KEY		1	472-7008-087	1	472-7035-087	1	472-7012-087
126	WATER SLINGERS		--		2	764-0173-478	--	
157	CASING GASKET		1	364-7013-598	1	364-7070-598	1	364-7021-598
158A	GREASE SEAL		1	712-7004-653	1	712-7034-653	1	712-7005-653
A158	THRUST BEARING CARTRIDGE		1	176-7016-010	1	176-7059-010	1	176-7021-010
B158	RADIAL BEARING CARTRIDGE		1	176-7017-010	1	176-7060-010	1	176-7022-010
159	BEARING HOUSING COVERS		2	164-7011-010	2	164-7044-010	2	164-7017-010
159A	GREASE SEAL		2	712-7005-653	2	712-7035-653	2	712-7006-653
161	BEARING LOCKNUT		1	544-0710-080	3	544-0716-080	1	544-0712-080
162	BEARING LOCKWASHER		1	908-0410-080	2	908-0416-080	1	908-0412-080
163	RADIAL BEARING		1	068-0160-647	1	068-0166-647	1	068-0162-647
168	THRUST BEARING		1	068-0160-647	1	068-0166-647	1	068-0162-647
212	PACKING		10	564-7001-802	10	564-7006-802	12	564-0181-802
213	SLEEVE NUTS		2	544-7005-208	2	544-7015-208	2	544-7007-208
272	COUPLING KEY		1	472-7005-087	1	472-0395-087	1	472-7013-087
345	BEARING SNAP RING		1	676-7023-088	1	676-7023-088	1	676-7023-088
MISCELLANEOUS PARTS NOT LABELED								
	CAPSCREWS FOR:							
	CASING (PARTING FLANGE)		16	168-0674-082	33	168-0825-082	18	168-0674-082
	CASING (STUFFING BOX)		4	168-0674-082	4	168-0825-082	4	168-0680-082
	BEARING CAP (NO. 6)		4	168-0578-082	--		4	168-0652-082
	BEARING HOUSING COVERS		8	168-0304-082	8	168-0382-082	8	168-0384-082
	BEARING CARTRIDGE TO BEARING ARMS				8	168-0636-082	--	
	PINS FOR:							
	CASING (PARTING FLANGE)		2	592-7002-087	2	592-7008-087	2	592-7007-087
	CASE WEAR RINGS		2	592-7009-087	2	592-0028-104	2	592-7002-087
	BEARING CARTRIDGES		2	592-0376-087	4	592-0859-087	--	
	PIPE PLUGS FOR:							
	SUCTION AND DISCHARGE (GAUGES)		2	600-0002-087	2	600-0004-087	2	600-0002-087
	BEARING ARM DRAINS		2	600-0004-028	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE		1	600-0005-028	1	600-0004-028	1	600-0005-028
	BOTTOM OF NECKS		1	600-0004-028	2	600-0006-028	1	600-0006-028
	SIDE OF DISCHARGE NECK		2	600-0006-028	2	600-0006-028	1	600-0006-028
	END OF THRUST BEARING CARTRIDGE		--		1	600-0005-028	--	
	BEARING CARTRIDGES		2	600-0006-028	2	600-0002-087	--	

PC. NO.	PART DESCRIPTION	*6-5824F*		*8-5826F*		10-5824F	
		QTY	PART NUMBER	QTY	PART NUMBER	QTY	PART NUMBER
	GLAND FASTENERS:						
	SWINGBOLTS OR STUDS	4	100-7001-360	8	808-0110-104	4	100-7002-360
	WASHERS	4	908-0114-080	--		4	908-0116-080
	NUTS	4	544-0113-190	8	544-0109-190	4	544-0115-190
	GLAND CLIP	--		--		4	204-7001-104
	GLAND RING	--		2	676-7126-208	--	
	SPACER SLEEVE	--		--		2	772-7003-212
	SETSCREW FOR SHAFT SLEEVE NUT	--		--		4	724-0643-113
	GREASE FITTINGS	2	508-0001-651	2	508-0001-651	2	508-0001-651
	BEARING COVER O-RINGS	2	364-0432-457	2	364-0454-457	2	364-0438-457
	LIFTING EYEBOLT	--		1	100-0107-080	2	100-0110-080
	FLUSH LINES:						
	COMPRESSION ELBOWS	4	868-3660-190	4	868-3660-190	4	868-3660-190
	TUBING	24	872-0124-175	24	872-0124-175	24	872-0124-175
	BALL VALVES	2	896-4533-644	2	896-4533-644	2	896-4533-644

PC. NO.	PART DESCRIPTION		*5-5922F* QTY	*5-5922F* PART NUMBER	6-5922F QTY	6-5922F PART NUMBER
1	IMPELLER					
A1	1ST STAGE		1	443-7028-644	1	444-7012-225
B1	2ND STAGE		1	443-7029-644	1	444-7013-225
2	PART OF NO. 3		--		--	
3	CASING ASSEMBLY	125# / 125#	1	189-0109-010	--	
		125# / 250#	1	189-0035-010	1	189-0018-010
		250# / 250 #	1	189-0104-010	1	189-0095-010
4	SHAFT					
	FOR RIGHT-HAND ROTATION		1	727-7019-072	1	727-7012-072
	FOR LEFT-HAND ROTATION		1	727-7045-072	1	727-7013-072
6	PART OF NO. 3		--		--	
10	LANTERN RINGS		1	676-7010-509	2	676-7025-509
13	OIL RING		--		--	
14	SHAFT SLEEVES		--		--	
	RIGHT-HAND		1	756-7018-208	1	756-7011-208
	LEFT-HAND		1	756-7019-208	1	756-7012-208
16	CASE WEAR RINGS		2	676-7035-208	2	676-7026-208
17	IMPELLER WEAR RINGS (OPTIONAL)		2	676-7034-208	--	
18	SHAFT COLLAR		--		--	
19	PACKING GLANDS		2	372-7033-208	2	372-7008-208
20	SHAFT SLEEVE O-RINGS		4	364-0432-457	2	364-0484-457
A20	BEARING HOUSING COVER O-RING		--		--	
39	CASING DIAPHRAGM		--	see next page *	--	see next page *
48	CASING DIAPHRAGM BUSHING		--	see next page *	--	see next page *
76	BEARING HOUSING SPACER		--		--	
95	STUFFING BOX WASHERS		2	908-7006-208	2	908-7030-208
102	IMPELLER KEY		1	472-7014-087	1	472-7010-087
118	THRUST BEARING CARTRIDGE CLOSURE		1	624-7004-087	1	624-7004-087
126	WATER SLINGERS		--		2	764-7005-478
157	CASING GASKET		1	364-7024-598	1	364-7014-598
158A	GREASE SEAL		1	712-7004-653	--	
158B	BEARING CARTRIDGE PIN		2	592-7002-087	2	592-7002-087
A158	THRUST BEARING CARTRIDGE		1	176-7017-010	1	176-7018-010
B158	RADIAL BEARING CARTRIDGE		1	176-7024-010	1	176-7019-010
B158A	OIL RING RESTRAINER		--		--	
B158B	COOLING COIL		--		--	
B158C	OIL RING RESTRAINER LOCK COLLAR		--		--	
159	BEARING HOUSING COVERS		2	164-7020-010	2	164-7014-010
159A	GREASE SEAL		2	712-7007-653	--	
A159	THRUST BEARING HOUSING OUTER COVER		--		--	
B159	THRUST BEARING HOUSING INNER COVER		--		--	
C159	RADIAL BEARING HOUSING COVER		--		--	
161	BEARING LOCKNUT		1	544-0710-080	1	544-0713-080
162	BEARING LOCKWASHER		1	908-0410-080	1	908-0413-080
163	RADIAL BEARING		1	068-0160-647	1	068-0163-647
168	THRUST BEARING		1	068-0508-647	2	068-0312-647
168A	RETAINING RING		1	676-7023-088	--	
188	CENTER SLEEVE ADAPTER SPACER		--		--	
205	THRUST BEARING HOUSING GASKET		--		--	
	THRUST BEARING HOUSING GASKET		--		--	
212	PACKING		16	564-7001-802	18	564-0184-802

PC. NO.	PART DESCRIPTION	*5-5922F*		6-5922F	
		QTY	PART NUMBER	QTY	PART NUMBER
213	SLEEVE NUTS	--		--	
	RIGHT-HAND	1	544-7008-208	--	
	LEFT-HAND	1	544-7009-208	--	
272	COUPLING KEY	1	472-7015-087	1	472-7009-087
*	CASING DIAPHRAGM ASSEMBLY	1	772-7004-644	1	772-7002-644
	CASING DIAPHRAGM	1	772-7004-010	1	772-7002-010
	CASING DIAPHRAGM BUSHING	1	136-7003-208	1	136-7001-208
	SETSCREW	2	724-0081-104	1	724-0079-104
MISCELLANEOUS PARTS NOT LABELED					
	IMPELLER HUB GASKET	1	364-7026-598	1	364-7016-598
	SLEEVE GASKET	2	364-7025-598	2	364-7015-598
	BEARING SPACER	--		2	772-7001-063
	BEARING LOCK COLLAR	--		2	224-7000-208
	CAPSCREWS FOR:				
	CASING (PARTING FLANGE)	16	168-0825-082	26	168-0753-082
	STUDS	2	808-7003-080	--	
	NUTS	2	544-0123-082	--	
	CASING (STUFFING BOX)	4	168-0680-082	4	168-0684-082
	BEARING CAP (NO. 6)	4	168-0578-082	4	168-0755-082
	BEARING HOUSING COVERS	8	168-0322-082	8	168-0382-082
	PINS FOR:				
	CASING (PARTING FLANGE)	2	592-7008-087	2	592-7004-087
	CASE WEAR RINGS	2	592-0028-087	2	592-7002-087
	PIPE PLUGS FOR:				
	TOP OF STAGES	2	600-0005-028	--	
	BEARING ARM DRAINS	2	600-0004-028	2	600-0004-028
	TOP OF CASING VOLUTE	1	600-0004-028	1	600-0005-028
	TOP OF DISCHARGE NECK	1	600-0004-028	--	
	SIDE OF DISCHARGE NECK	2	600-0006-028	1	600-0006-028
		--		2	600-0002-087
	BOTTOM OF DISCHARGE NECK	--		--	
	STUFFING BOX	1	600-0004-028	1	600-0004-028
	GLAND FASTENERS:				
	SWINGBOLTS OR STUDS	4	100-7002-360	4	100-7002-360
	WASHERS	4	908-0116-080	4	908-0116-080
	NUTS	4	544-0115-190	4	544-0115-190
	GREASE FITTINGS	2	508-0001-651	2	508-0001-651
	LIFTING EYEBOLT	1	100-0107-080	1	100-0107-080
	CASING DRAIN PIPING:				
	NIPPLE	1	600-1310-387	1	600-1310-387
	ELBOW	1	600-0231-387	1	600-0231-387
	NIPPLE	1	600-1328-387	1	600-1328-387
	PIPE CAP	1	600-0156-387	1	600-0156-387
	FLUSH LINE:				
	COMPRESSION ELBOWS	2	868-3660-190	2	868-3660-190
	TUBING	12	872-0124-175	12	872-0124-175
	BALL VALVE	1	896-4533-644	1	896-4533-644
	HINGED OIL HOLE COVER	--		--	
	OIL RING ARM RETAINER	--		--	

Repair Kits
Overhaul Kits
Rotating Elements

MODEL	PUMP SIZE	REPAIR KIT	OVERHAUL KIT	ROTATING ELEMENT
2800F [1]	3-2874AF	476-0946-644	476-0974-644	700-0708-644
	3-2874CF			700-0709-644
	4-2873AF	476-0947-644	476-0975-644	700-0710-644
	4-2876AF	476-0948-644	476-0976-644	700-0711-644
	4-2876CF			700-0712-644
	4-2823CF	476-0949-644	476-0977-644	700-0713-644
	5-2823AF	476-0950-644	476-0978-644	700-0714-644
	5-2824AF	476-0951-644	476-0979-644	700-0715-644
	6-2876AF	476-0952-644	476-0980-644	700-0716-644
	6-2823AF	476-0953-644	476-0981-644	700-0717-644
	6-2823CF			700-0718-644
	6-2824CF	476-0954-644	476-0982-644	700-0719-644
	6-2825AF	476-0955-644	476-0983-644	700-0720-644
	8-2823AF	476-0956-644	476-0984-644	700-0721-644
	8-2824AF	476-0957-644	476-0985-644	700-0722-644
	10-2825AF	476-0958-644	476-0986-644	700-0723-644
5800F [2,3]	3-5876AF	476-0920-644	476-0921-644	700-0707-644
	4-5823F	476-0959-644	476-0987-644	700-0724-644
	4-5824F	476-0960-644	476-0988-644	700-0725-644
	5-5876F	476-0961-644	476-0989-644	700-0726-644
	6-5876F	476-0963-644	476-0991-644	700-0729-644
	6-5823F	476-0964-644	476-0992-644	700-0730-644
	6-5824F	476-0965-644	476-0993-644	700-0731-644
	8-5826F	476-0968-644	476-0996-644	700-0735-644
	10-5824F	476-0969-644	476-0997-644	700-0736-644
5900F [4]	*5-5922F* (RH only)	476-0970-644	476-0998-644	700-0737-644
	5-5922F (LH only)			700-0738-644
	6-5922F (RH only)	476-0971-644	476-0999-644	700-0739-644
	6-5922F (LH only)			700-0740-644

Repair Kits typically include:

Casing Gasket
Gland Fasteners
Packing Rings
Lantern Rings
Bearings
Retaining Rings
Water Slingers
Coupling Key

Overhaul Kits typically include:

Casing Gasket
Gland Fasteners
Packing Rings
Lantern Rings
Bearings
Retaining Rings
Water Slingers
Coupling Key
Shaft Sleeves
Shaft Sleeve Nuts
Shaft Sleeve Nut Setscrews
Shaft Sleeve O-rings
Packing Gland
Packing Box Washer
Impeller Key

WARRANTY TO BE PLACED HERE